


IRONMAN 4x4

TENT FAN - LED LIGHT

1
YEAR
WARRANTY

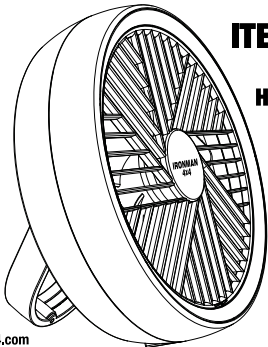

ITENTFAN003

**Rechargeable
Hi-Flow Tent Fan
and LED Light
Owners Guide**

www.Ironman4x4.com
www.ironman4x4america.com

IMPORTANT: Please read all procedures and precautions before using the Ironman 4x4 Tent Fan. If you have any questions please contact our customer service department.

• Operating Steps



1. Lighting - Brightness Level

1. Press the "☀️" button once for LOW brightness
2. Press the "☀️" button twice for MED brightness
3. Press the "☀️" button three times for HIGH brightness
4. Press the "☀️" button four times to turn OFF



2. Fan - Speed

1. Press the "🌀" button once for LOW speed
2. Press the "🌀" button twice for MED speed
3. Press the "🌀" button three times for HIGH Speed
4. Press the "🌀" button again four times to turn OFF



3. Charging

※ Battery Indicator


- ● ● ● 75%-100%
- ● ● ○ 50%-75%
- ● ○ ○ 5%-50%
- ○ ○ ○ 0%-5%

Notice: "●" is on

• Warning

- Do not look directly in to the LED this may cause eye damage
- Do not leave the product unattended when in use
- Fully charge battery before use
- Recharge the battery only with DC outputs of 5V / 2A Only
- Before use ensure there are no broken or worn parts
- Do not attempt to disassemble or modify the product

• Specifications

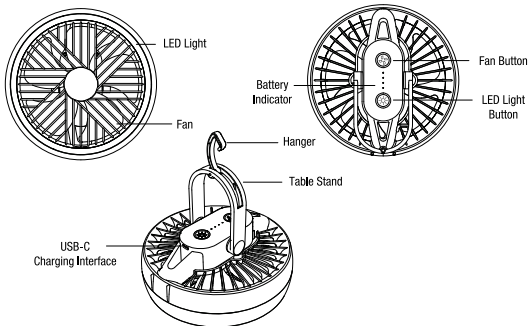

• Specifications

Battery Type: Li-Ion 3,400mAh / 3.7V

Input: Type-C 5V/2A (Max)

Measurement: 1800 x 76mm (70 x 3")

Weight: 510g